

Instruction Manual

- Thank you for purchasing a Versa watch winder.
- Please take a few minutes to read through the manual to ensure proper operation.
- Please keep the instruction manual for future reference.
- The adapter port can be found on the rear side of the unit.




Item Specification

Power	AC adapter DC/4V 550mA	
Features	1. Clockwise, counterclockwise, and bi-directional settings. 2. 4 preset TPD settings (Turns per day) 650TPD 850TPD 1050TPD 1250TPD Please note that the watch winder will turn, rest, and turn again for each setting. The watch winder will not turn constantly to prevent over winding of your watch. This is the normal operation for the watch winder.	
Size	6.25 x 4.125 x 5.125 inch (L x W x H)	
Weight	About 0.93 lbs (without adaptor)	Accessory AC Adapter

Operation

1. Insert the adapter into the adapter port and plug it into the electrical outlet.
2. Open the front cover and use your index finger and thumb to hold the watch holder from both sides and gently pull out the watch holder.
3. Place watch on the holder by pushing in the spring on the back of the holder, then put your watch around the holder and let go of the spring.
4. Once the watch is on the holder, place the holder back into the winder. Push until you hear a click signifying that it is securely in the winder.
5. To start operation, please set the interval and direction settings on the back of the watch winder.

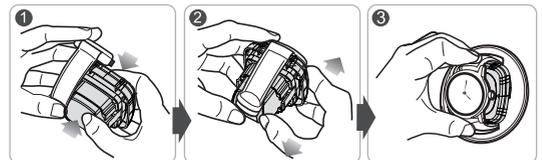

Attention

- * If you do not use this product for a long time, please switch off the unit.
- * Make sure to turn the unit off completely before attempting to pull out the watch pillow.
- * For warranty information, please contact the retailer you purchased from.



Note

- * Please use the AC adapter supplied with the unit. Input: AC/100-240V, 50-60Hz Output: DC/4V 550mA
- * Remove the adapter when the winder is not in use.
- * Always turn off the power when inserting or removing watches.
- * Don't shake the watch winder when the winder is in operation.